



FITTING AND OPERATING GUIDE



12v/24v 'SL' Combination Wired/Wireless Remote and Receiver User Guide

VERY IMPORTANT - YOU MUST READ AND UNDERSTAND THIS GUIDE
BEFORE INSTALLING AND OPERATING YOUR WINCH

Thank you for buying a genuine WINCHMAX wireless remote control kit. This should provide many years of trouble free operation, however it is essential that it is correctly installed otherwise irreparable damage to the micro circuitry/contacts will be caused.

This product is available in single and double handset versions and several types of control box/receiver. This manual is common to all 'SL' style Combination Remote Control handsets.

GETTING STARTED

Warning: to prevent damage or injury in the case of unintended operation always electrically isolate any equipment when not in use.

Please note that this remote control unit (receiver and remote control) has been fully tested before being despatched and is in full working order.

As the most common cause of damage is incorrect wiring we ask our customers to test the unit themselves before installation and report any problem at that time

If you have any doubt as to the correct wiring please do not attempt connection before checking with us. Our telephone contact is 01986 899264

Accidentally allowing an output to connect to earth/ground, or by 'flashing' an output onto a connection will destroy the receiver. If the unit is damaged as a result of incorrect installation we cannot be held responsible for the damaged caused.

WARRANTY

This product is covered by a limited RTB (return to base) warranty for a period of 12months. In the case of product failure, please return to Winchmax UK ensuring that you enclose proof of purchase and full contact details. Once the item has been inspected we will contact you to report our findings and if failure is due to manufacturing defect we will repair or replace the item at our discretion. Winchmax UK cannot be held responsible for any consequential loss or damage due to the failure of this device.





COMBINATION REMOTE CONTROL

- To power on the handset press the MODE button and the WIRELESS indicator light illuminates.
- To use in WIRED mode connect the handset to the control box socket using the cable supplied. The WIRED indicator will illuminate.
Note: when the cable is connected it is not possible to switch to WIRELESS mode
- The large IN/OUT rocker switch will activate the winch motor.
- Press the MODE button to turn off manually.
- If the transmitters are left on and unused for approximately 5 minutes they will auto power-off to preserve the battery.
- If the power light fails to illuminate or becomes weak, please replace the batteries. Each transmitter contains 2 no. CR2032 (3V) button cells
- Always keep the wireless transmitters safe and dry and protect from unauthorized/accidental operation.



WINCHMAX LTD

The Powerhouse,
Earsham Hall,
Bungay,
Suffolk,
NR3452AN.

info@winchmax.co.uk

Tel +44(0)1986899266

Registered in England No. 4083040

WINCHMAX LTD
WWW.WINCHMAX.CO.UK